


9	Drawer back panel	2	No	Part	Qty
10	Drawer bottom panel	2	1	Head Board	1
11	Bed board	3	2	Right Bedside	1
			3	Left Bedside	1
			4	Foot Board	1
			5	Center panel	2
			6	Shelf	2
			7	Drawer front panel	2
			8	Drawer side panel	4

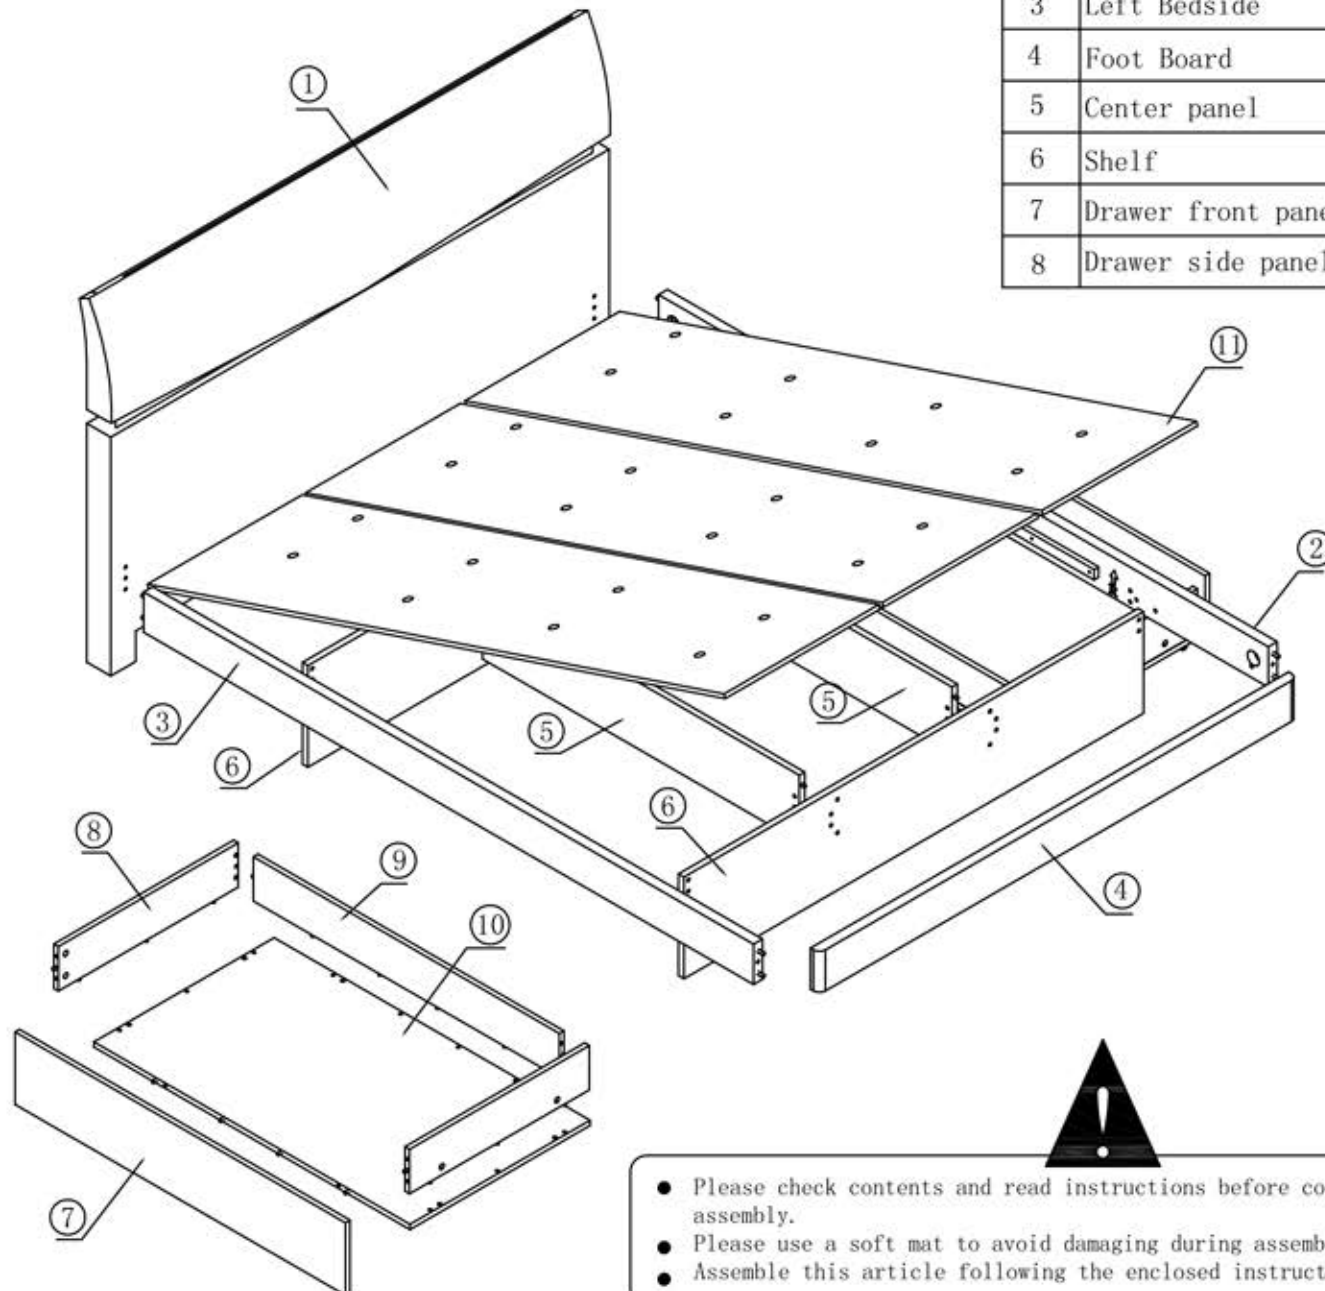


No	Part	Qty
A	 Angle iron	8
B	 Foot wheel	8
C	 Threaded Bolt M8x65	2
D	 Threaded Bolt M8x70	2
E	 Maxiluna Washer Ø40X15	4
F	 Cover Cap Ø40	4
G	 Nut M8	4
H	 Spanner M8/13mm	1
I	 Spanner	1
J	 Gasket M8	2
K	 Screw M6X15	32
L	 Screw Ø4x14	16
M	 Quickfit (Ø5x33)	32
N	 Cam Ø15x12	32
O	 Non-bump plastic Ø12x1	4




- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.




STEP 1

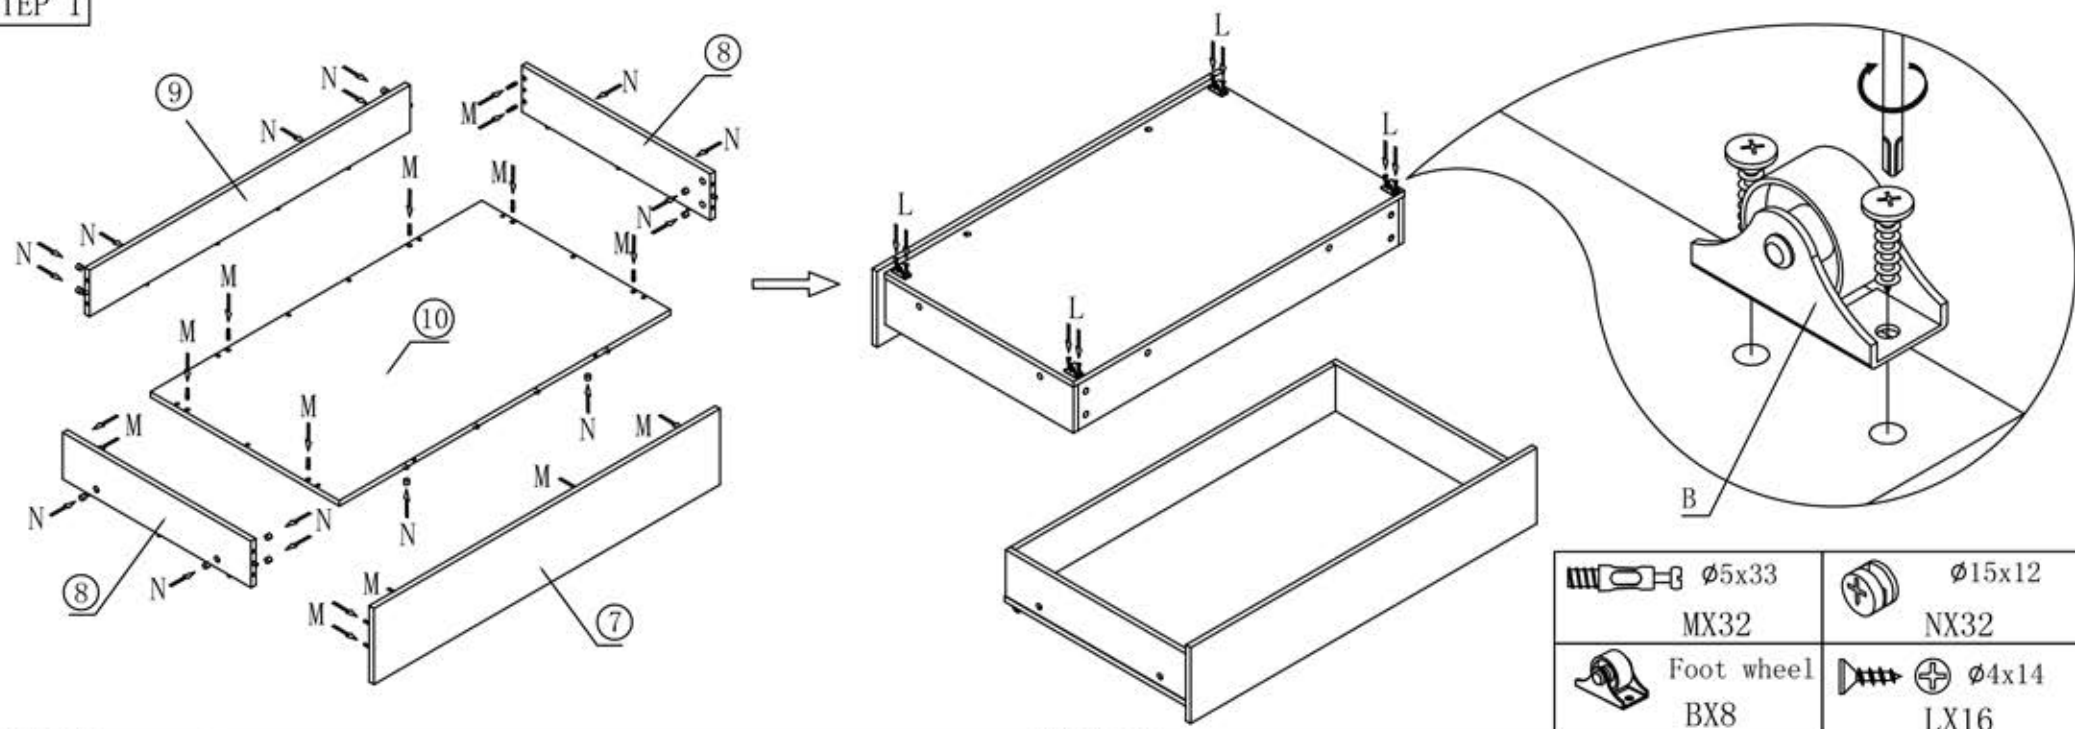


STEP 2

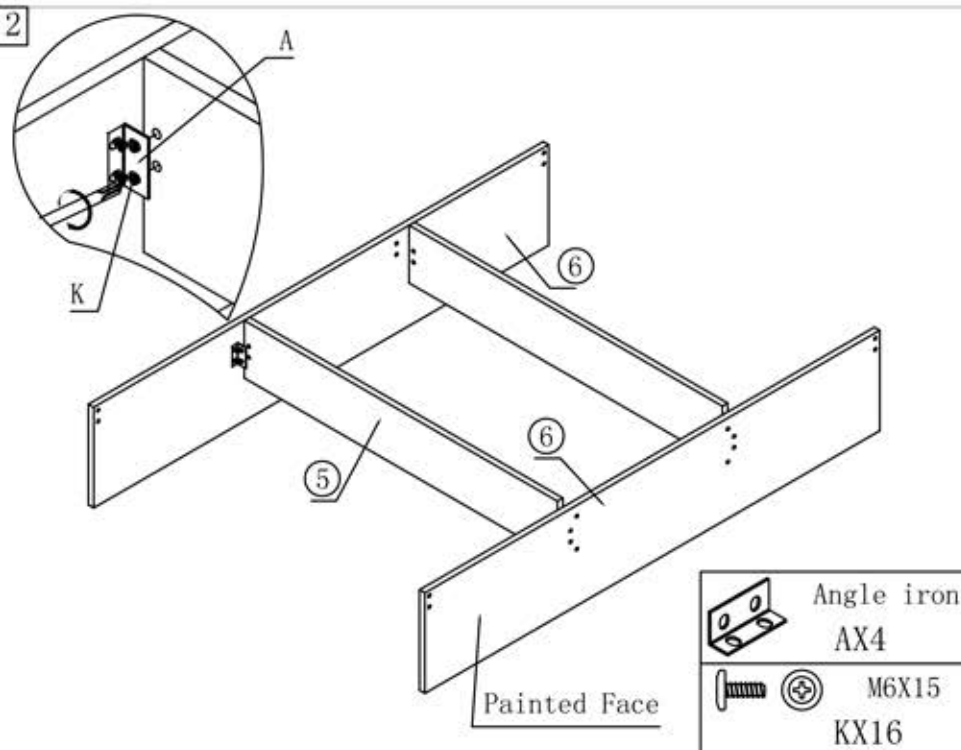


STEP 3

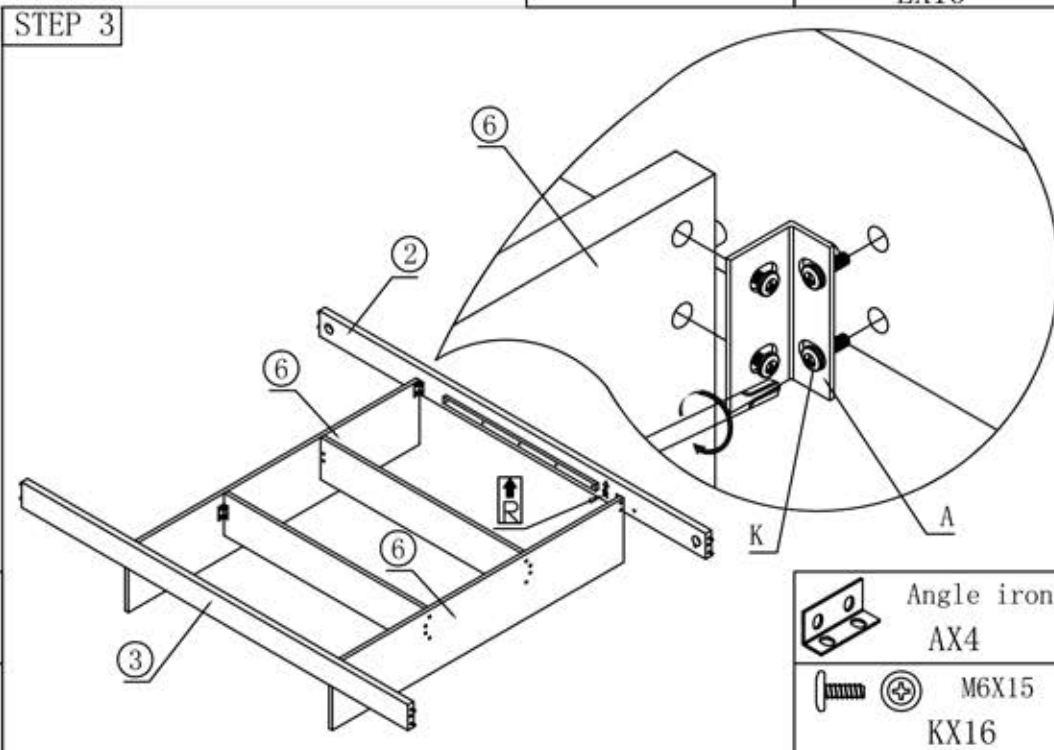

STEP 4

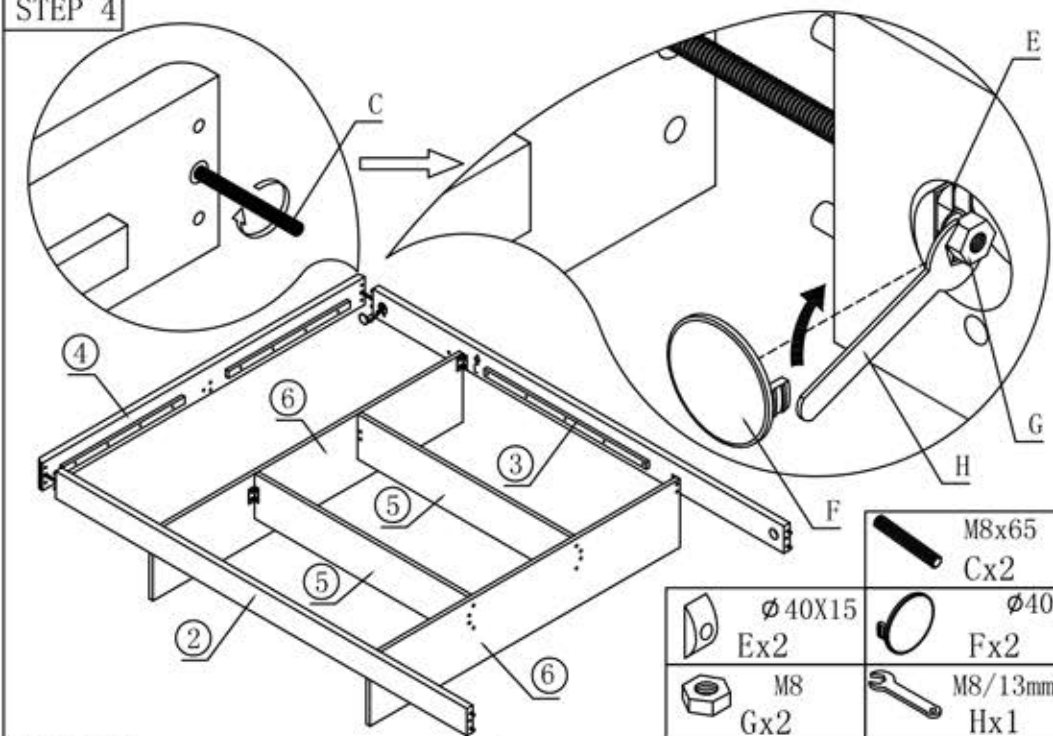

STEP 6

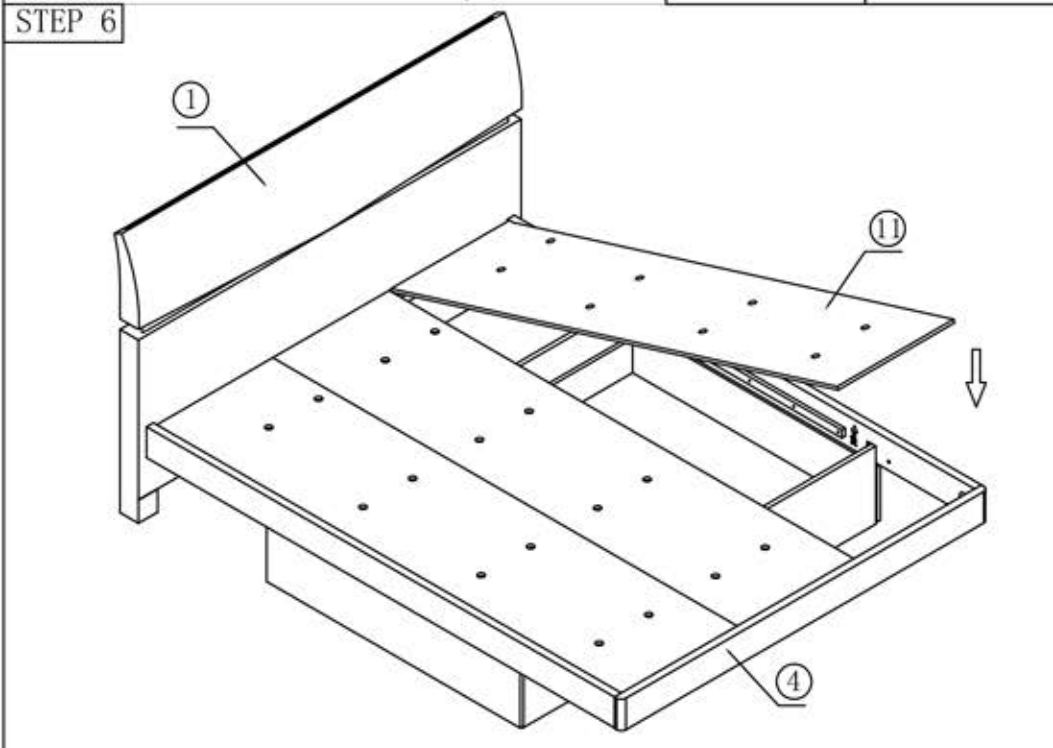

STEP 5

